


KD-Fixed Window with Nail Fin Installation and Glazing Guide CityVu/CityLine/C600/C605

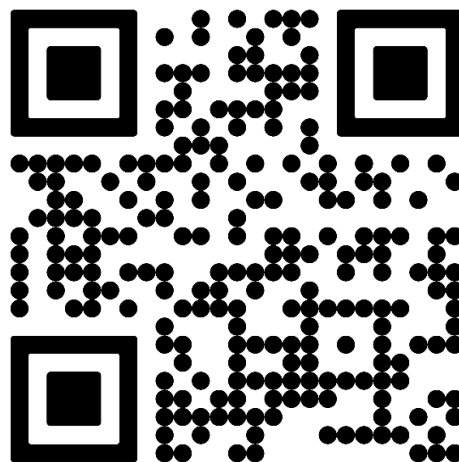

-Scan here for a digital version-

Part # IG-068 - V.1.2 6/29/2026

**Pages 5 to 6 -- Field Assembly
Pages 7 to 11 -- Weather Resistant Barrier (WRB) Application
Pages 12 to 13 -- Glass Installation and Final Assembly**


If this set of instructions does not match your installation method or the wall conditions of the job site, please call Quaker Customer Service for additional information.




Quaker Window Products
504 Highway 63 S
Freeburg, MO 65035
Phone: 800-347-0438
Fax: 573-469-4151
www.quakerwindows.com

Note:

While the details within these instructions are based on the C600/C605 (two-tone) fixed window, the installation, glazing, and sealing methods apply to the C600/C605 (one-tone) fixed window.

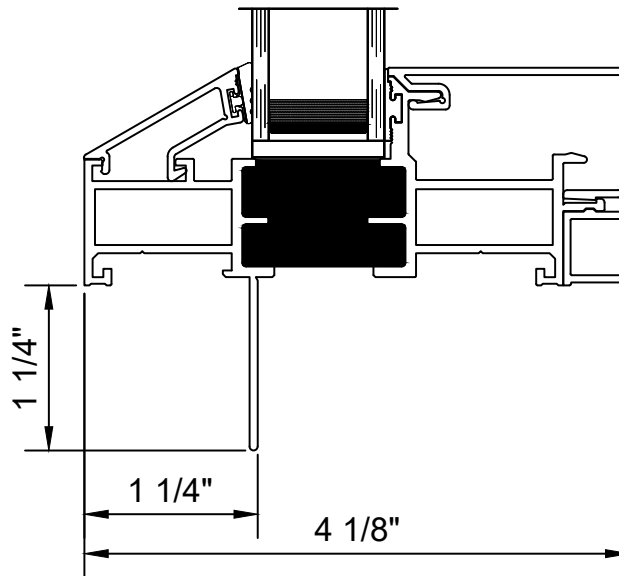

C600/C605 (two-tone)

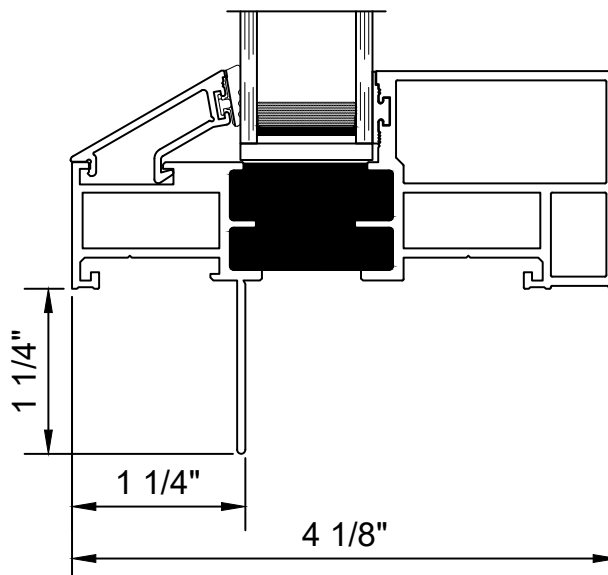

C600/C605 (one-tone)

Tools Required by Installer

Safety Glasses



Drill/Driver



Level



Caulk Gun



Utility Knife



Metal Cutting Saw



Tape Measure



Staple Gun



Rubber Mallet



J-Roller



Materials Required by Installer

Foam Backer Rod



Plastic Shims



Self-Adhering Flashing Tape



Perimeter Fasteners



Sealant



Denatured Rubbing Alcohol



-Carefully read these instructions before starting any installation-

Failure to install and maintain QUAKE® products according to these instructions may void any product warranty. However, these are generic instructions that cover common situations and applications, aspects of which may not be appropriate for all installations due to building design, site conditions, construction materials, or installation methods used. Refer to shop drawings, if applicable, for additional notes and details. Please consult Quaker for specific applications not covered in these installation instructions, or visit our website at www.quakerwindows.com, or call 800-347-0438 for additional information.

Tools

- Follow manufacturer's instructions and safely operate tools, ladders, or scaffolding. Always wear safety glasses. Failure to do so could result in injury, product, or property damage.

Handling

- Do not store QUAKE® products outside or in an unprotected, high moisture, or high heat environment prior to installation. Doing so could result in product damage.
- Do not carry, transport, or store QUAKE® products in a flat (horizontal) position. Doing so could result in product damage or injury.
- Window and door units should be kept or stored in an upright (vertical) position, with support across the sill to avoid bowing. Do not lay any units in a flat position!

Glass

- If glass gets broken, please exercise caution, as glass fragments can cause lacerations or other injuries. In many areas, local building codes require safety glass to be used in certain applications. All QUAKE® products are available with safety glass if they are ordered that way.

Fastening

- Metal fasteners and components could corrode when used in contact with preservative-treated lumber. Use approved and appropriate fasteners and components to fasten QUAKE® products in this application. Failure to do so could result in a product performance failure, injury, or property damage.
- Quaker does not provide anchorage or fastener calculations.
- Quaker is not responsible for determining structural adequacy of the anchorage and fasteners used to install QUAKE® products, or the openings into which they are installed.

Installation

- Report any damage to dealer immediately. Do not install product if damaged. Quaker is not responsible for addressing products that are damaged after delivery, or product that is installed in a damaged condition.
- Always support window or door products in an opening until fully fastened. Failure to do so could result in the product falling out of an opening and causing injury, product, or property damage.
- Nailing flanges and drip caps (integral or applied) do not take the place of window flashing. All QUAKE® products must be properly flashed and sealed with material compatible sealant for protection against water and air infiltration around the entire exterior perimeter. Failure to do so could result in a product installation failure and property damage.
- Windows and doors must be properly shimmed. To properly shim a QUAKE® product, follow relevant installation guidelines, and never set a window directly on a sill plate. Failure to shim properly is an installation failure that could result in product performance failure or property damage.
- Construction directly above an opening must be engineered and designed not to transfer loads directly to any windows or doors. If live or dead loads are transferred to a QUAKE® product, this may affect functionality and result in glass failure or otherwise damage frame joinery, perimeter seals, or other aspects of the product. Proper construction of the rough opening must take place prior to the installation of the QUAKE® product.
- Please confirm that any necessary vertical deflection of the head condition is consistent with the selected QUAKE® product. Most QUAKE® products are not designed to allow any deflection at the head condition. Shop drawings may indicate the maximum allowable vertical deflection at the head condition of a QUAKE® product. If vertical deflection is a concern but shop drawings are not provided, please contact Quaker for assistance.
- Windows and doors have small parts that, if swallowed, could pose a choking hazard to young children. Please dispose of unused, loose, or easily removed small parts. Failure to do so could result in injury or death.
- Do not drill through or into the sill or frame of any QUAKE® products, whether to install alarm wires or for any other reason.
- During installation and positioning of any window or door products with an aluminum frame, make sure to align the thermal break of the product, with the insulation plane or air barrier of the building itself, in order to maintain continuity and integrity of the thermal envelope, and prevent thermal bridging that leads to excessive thermal transfer and/or condensation. In other words, the thermal break of the product must be recessed from the exterior plane of the wall opening, remain fully embedded within the wall opening, and not be exposed directly to exterior elements.

Sealing

- Follow supplier instructions for proper application of minimally expanding foam, sealant, water resistant barrier or liquid barrier, and flashing products and systems to ensure safety, proper material application, compatibility, and to understand the need for periodic maintenance for continued weather resistance of their products. Failure to do so could result in product performance failure or property damage.
- Minimally expanding foam insulation must be compliant with AAMA 812.
- If silicone is selected as an appropriate sealant, Quaker recommends using 100% neutral cure silicone sealant, that is ASTM C920 compliant. Always clean and prepare the surfaces where the sealant will be applied per the manufacturer's recommendation. Once applied, properly tool the sealant in place. Failure to do so could result in product performance failure or property damage.
- Flashing tape must meet ASTM-D779 performance requirements.
- Maintain and properly seal a minimum of 1/4" gap (or whatever is specified within these installation instructions or shop drawings) around the perimeter of the window or door frame and the exterior finish materials. Failure to do so could result in product installation failure or property damage.

Joining

- Do not join any Quaker product to another product that is not designed for joining. Joined products must be individually supported in the opening. Failure to do so could affect operation and product performance and could result in a product installation failure or property damage.

Cleaning


- Do not use any cleaning agent other than a mild, non-abrasive window washing solution or glass cleaner applied in accordance with any product labeling instructions and Quaker's care and maintenance instructions. The use of harsh chemicals (such as brickwash, bleach, alcohol, hydrochloric acid, or muriatic acid) for cleaning or other purposes may damage QUAKER products, glass, fasteners, hardware, seals, sealant, or metal flashing. Please protect these products by following the cleaning product's instructions for its proper use.
- Do not use a razor blade to clean a glass surface, as damage to the glass may result.

IMPORTANT

- Buildings constructed prior to 1978 may contain lead paint which could be disturbed during window or door replacement. For more information on proper management of lead paint, go to: www.epa.gov/lead
- Care must be taken to properly recycle or dispose of used or old materials. Any recyclable material should be separated from non-recyclable or hazardous materials. Please consult with local or state authorities regarding proper disposal of non-recyclable or hazardous materials.
- Inspect all window and door units for any damage or defects prior to installation. Contact the nearest QUAKER distributor if there are any problems or issues.
- **WARNING:** This product can expose you to chemicals, including titanium dioxide or methanol, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov
- **WARNING:** Drilling, sawing, sanding, or machining wood products can expose you to wood dust, a substance known to the State of California to cause cancer. Avoid inhaling wood dust or use a dust mask or other safeguards for your personal protection. For more information go to www.P65Warnings.ca.gov
- When installation is completed, operable window and door products, and related hardware or equipment, may require some adjustments. Confirming operability and making minor adjustments are within the scope of the installation services performed by others.
- **WARNING - OVERHANG NEEDED:** It is recommended that doors (swing and sliding) with ADA or Low-Profile Sills be installed with an overhang depth equal in length to the height of the door. If you choose to use an overhang depth less than the height of the door, you must confirm that it is appropriate based on code requirements and the expected local wind and rain conditions.


Field Assembly (Pages 5-6)

FA1

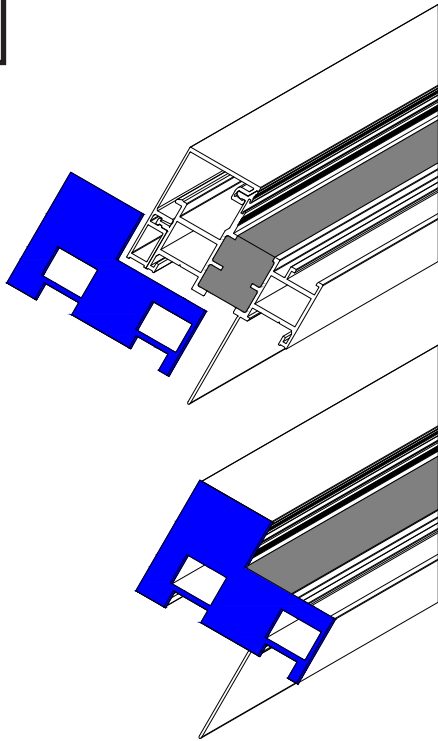

Starting with the sill frame, apply a gasket to each mitered end by placing the adhesive side of the gasket to the mitered end. Ensure the gasket slightly overlaps the perimeter.


FA2

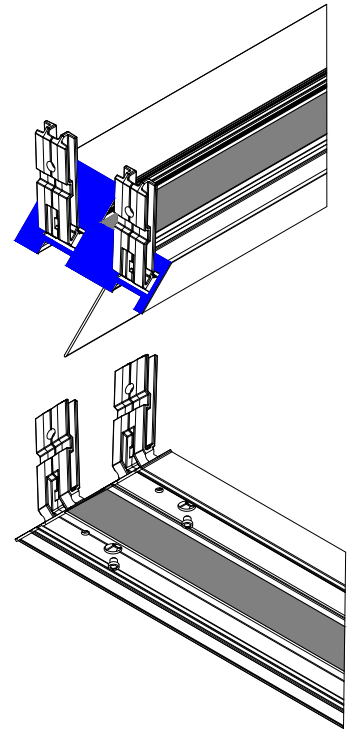

Insert and screw the corner keys into the ends of the sill frame with the provided corner key screws as shown.


Each mitered end gets two keys, each key gets one screw through the frame piece.

FA3

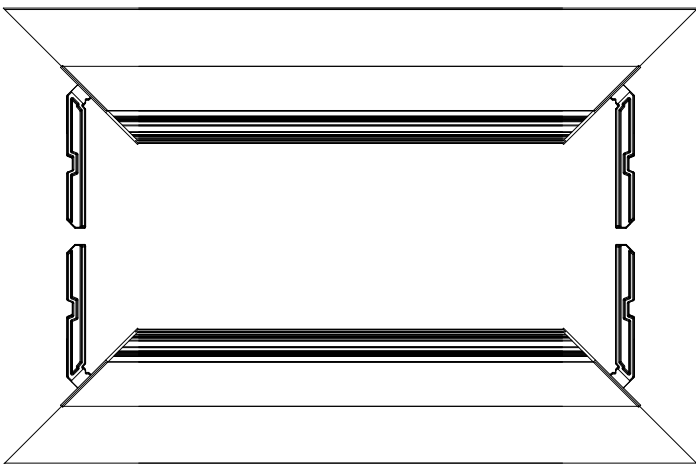


Repeat steps 1 and 2 for the header frame member. Both the header and sill members should have one gasket, 2 corner keys, and 2 key screws on each mitered end.

FA4

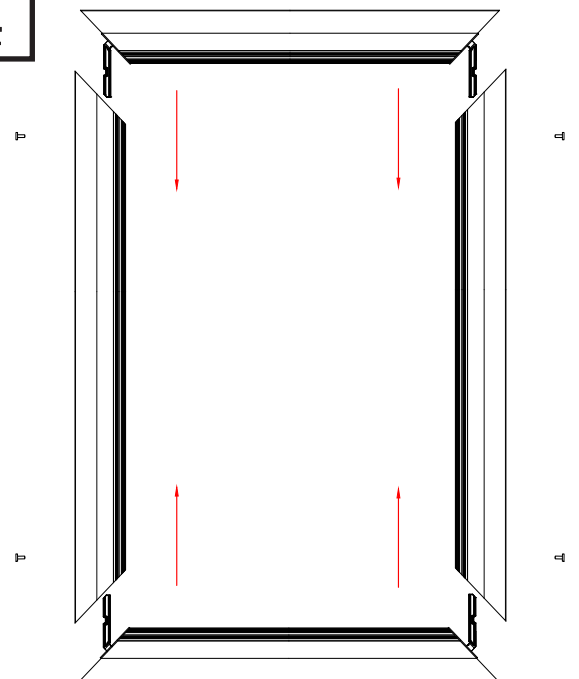

Attach the head and sill to the jambs by inserting the corner keys into the open ends of the jambs and screwing the keys in place through the jambs with the provided screws.


FA5

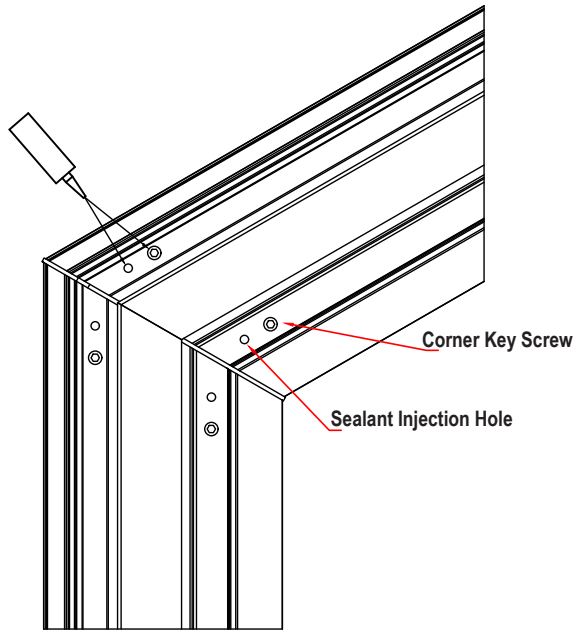

Using a caulk gun and sealant, inject sealant through the injection hole until the sealant can be seen through the other injection hole along that corner key. Also cover the screw heads for the corner key screws. Repeat for each corner key in the entire assembly.

FA6

Assembly complete. Refer to the following pages for properly installing the frame into the rough opening.


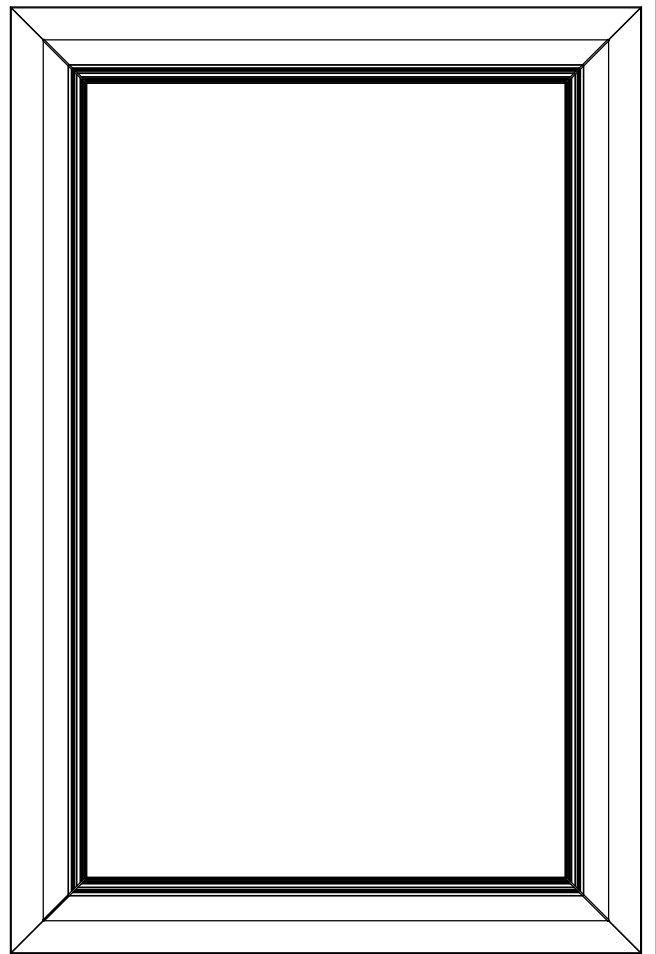


With Weather Resistant (WRB) Application (Pages 7-11)

--See FMA/AAMA 100-12 for additional information--




WB1

From the interior, measure and verify the size of the rough opening. The rough opening should be $\frac{3}{4}$ " wider and $\frac{1}{2}$ " taller than the Window Unit, unless otherwise specified on the shop drawings. Verify the rough opening is flat, plumb, level, and square. Take diagonal measurements to check for square. The sill plate beneath the unit must be level for proper unit operation. Go to the exterior and cut the Weather-Resistant Barrier (WRB) in an 'I' pattern.

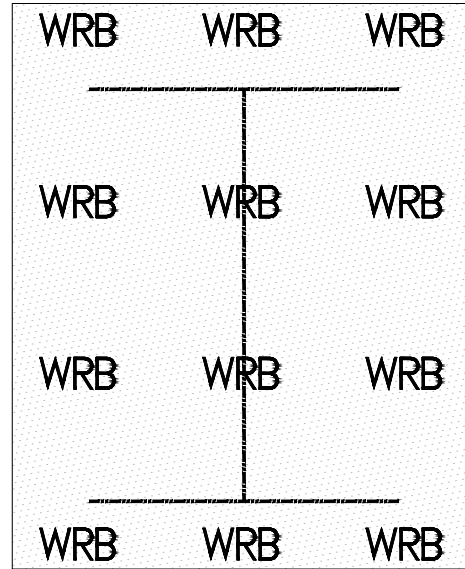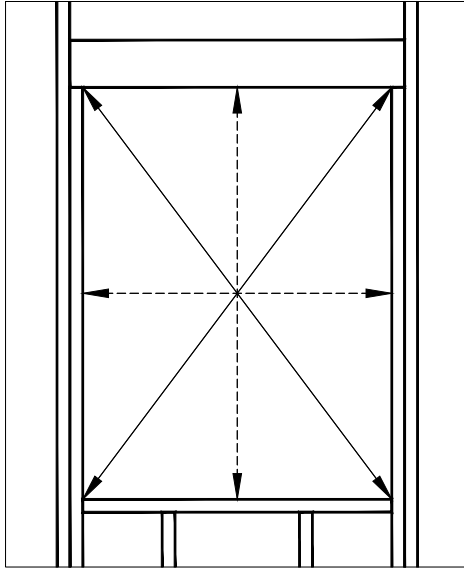


WB2

Fold the WRB sides towards the interior and trim as needed. Do not staple in place. Make 4"-6" horizontal cuts in the WRB at the head and sill jambs. Make a 45° x 6" long cut at the head condition. Fold back WRB at the cut lines, and tape into place.

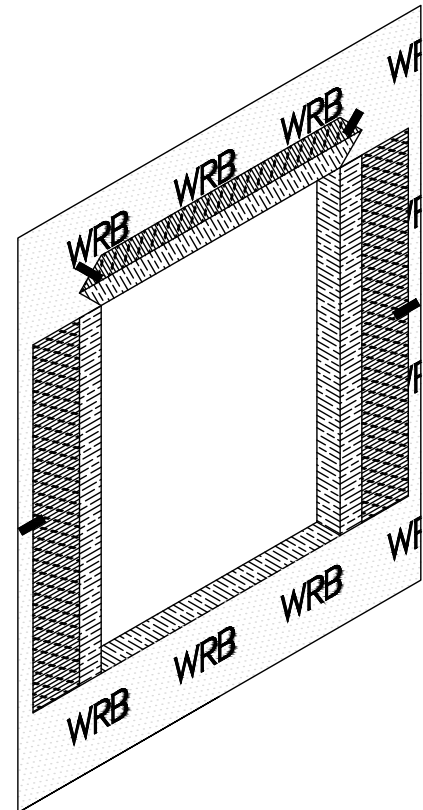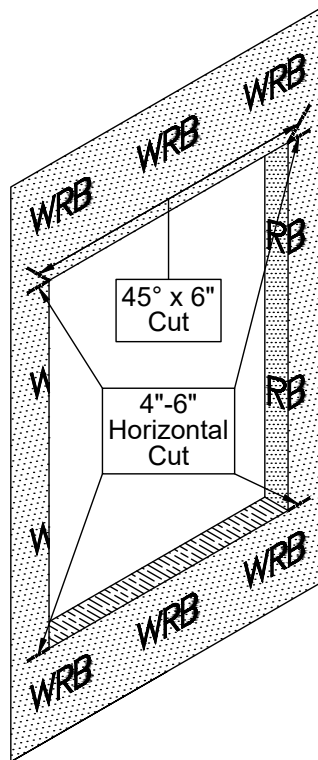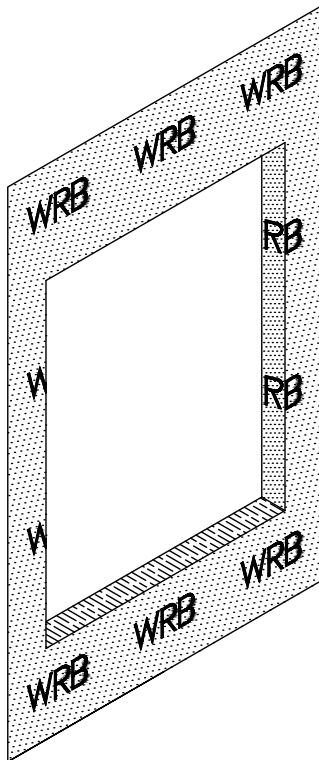

WB3



Measure the width of the rough opening, and cut a length of self-adhering flashing that is 12", or more, than the width of the rough opening. This will allow the flashing to run 6"+ up each jamb condition. Apply the flashing to the exterior side first, allowing for a minimum of 3" below the sill and up each side. The flashing tape must cover the entire sill plate. If needed, apply an additional piece of flashing over the first one with a 1" minimum over-lap. Start from the exterior and work towards the interior. After applying the sill flashing, apply sealant at the jambs where shown. Fold the WRB jamb flaps back into place, over the sill flashing, and fix into place. Leave head flap in place.

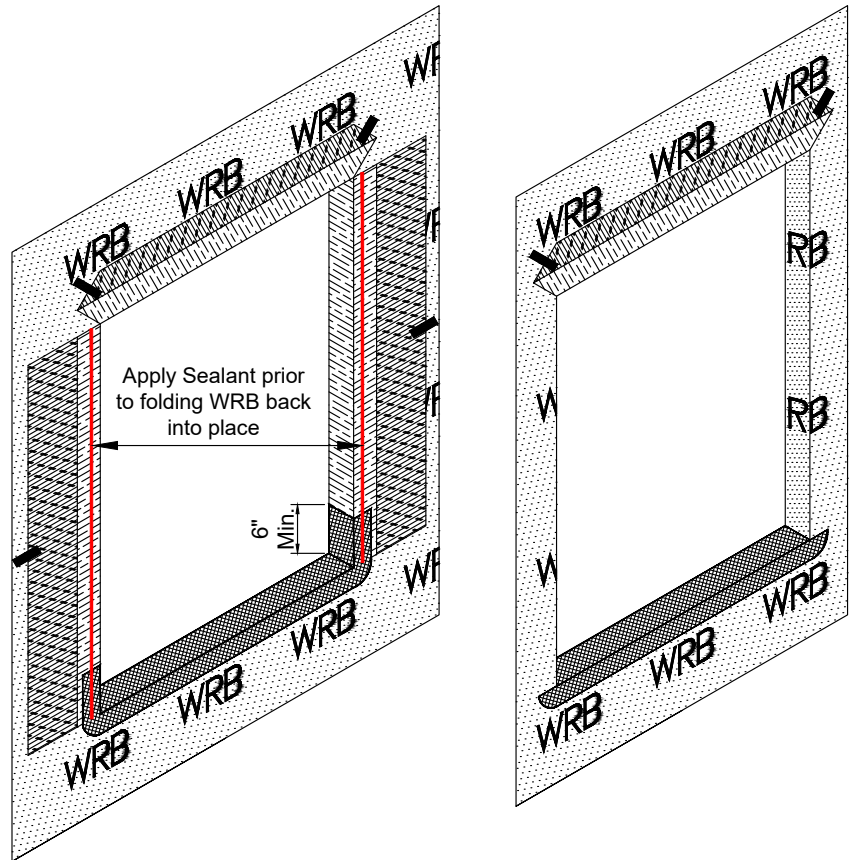

WB4

Test fit the Window Unit in the opening to ensure proper fit. Make sure unit can be installed square, plumb, and level. Insert plastic shims at the sill and jambs. The unit will come with pre-punched holes for attachment. Match drill pilot holes in the structure per the Shop Drawings or anchorage calculations. Typically, 3" from the ends and 12" on center.

NOTE: Not all pre-punched holes will be used. When done, remove the unit.

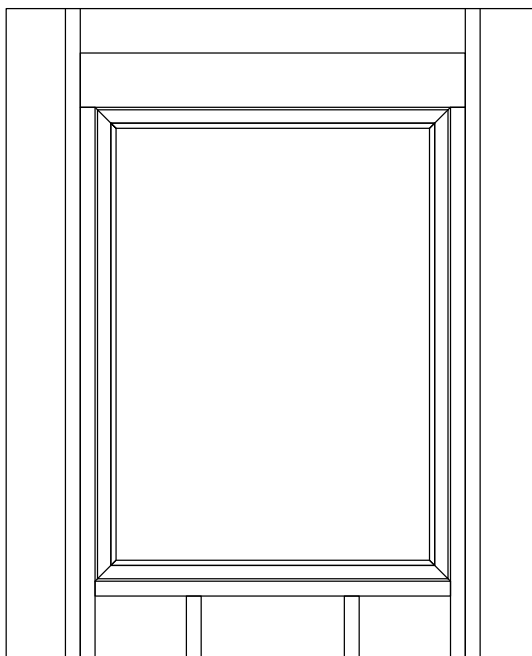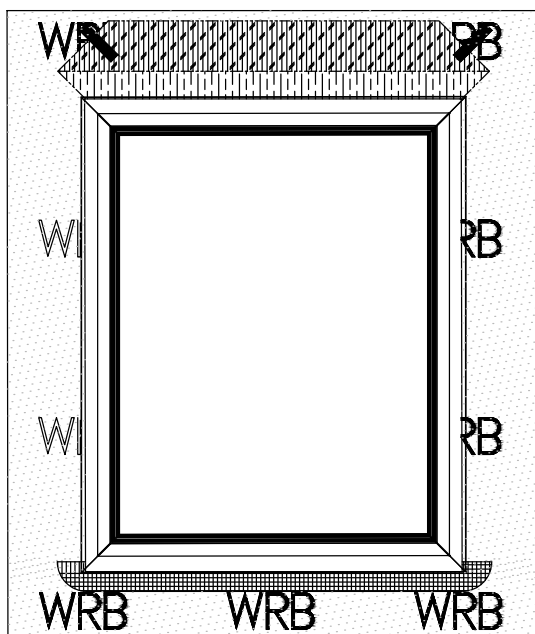


Apply a generous amount of sealant around the entire Nail Fin as shown in the sketch, leaving (2) 2" voids no more than 4" from jambs at the sill. Make sure placement of sealant will contact the WRB and/or Flashing.

–WRB Supplier is required to specify what type of sealant should be used for compatibility–

Re-Install the unit in the opening by pushing unit tight against the structure. Make sure the unit is tight against the WRB, and is square, plumb, and level.

DO NOT PLACE WINDOW UNIT DIRECTLY ON THE BUILDING STRUCTURE WITHOUT SHIMS.


Plastic shims are required at the sill and jambs. Use the required fasteners to secure the unit in the opening. DO NOT over-tighten the fasteners and check for level several times while fastening in place. Seal securely over all the fastener heads and at the mitered Nail Fin corner joints.

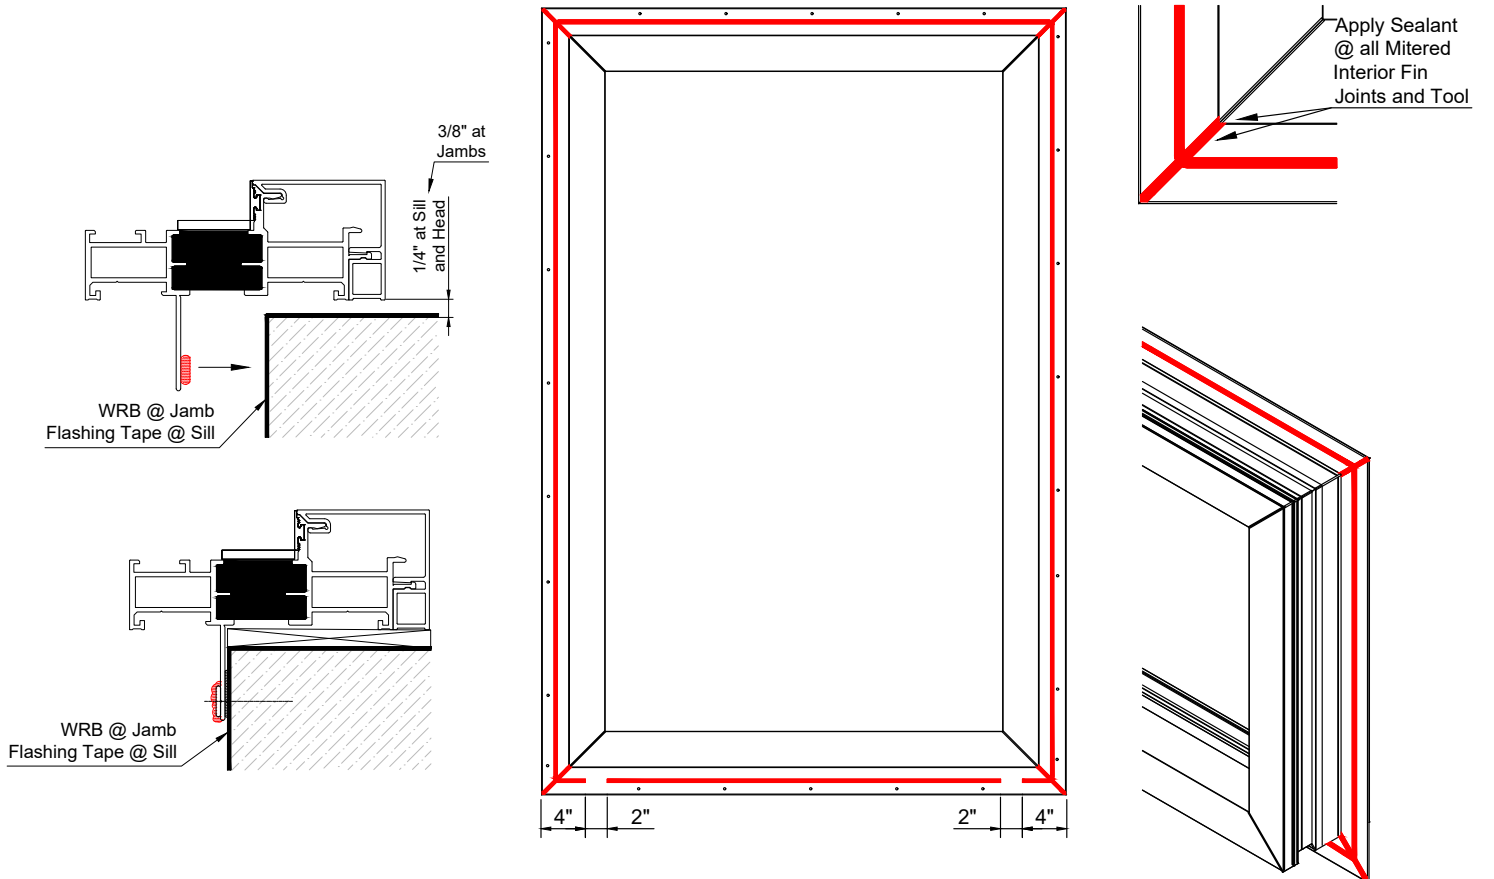

After installing the window, apply sealant to the top of the Window Unit, and to the top of the sill flashing (where shown). Push the supplied Flashing into place, and attach the flashing to building at the jambs and centerline of the D.L.O.. Apply sealant over the fastener heads, then tool all sealant as needed.


Also, plug and seal the gap between the head and sill flashing and window frame at the open ends.

Tool as needed.

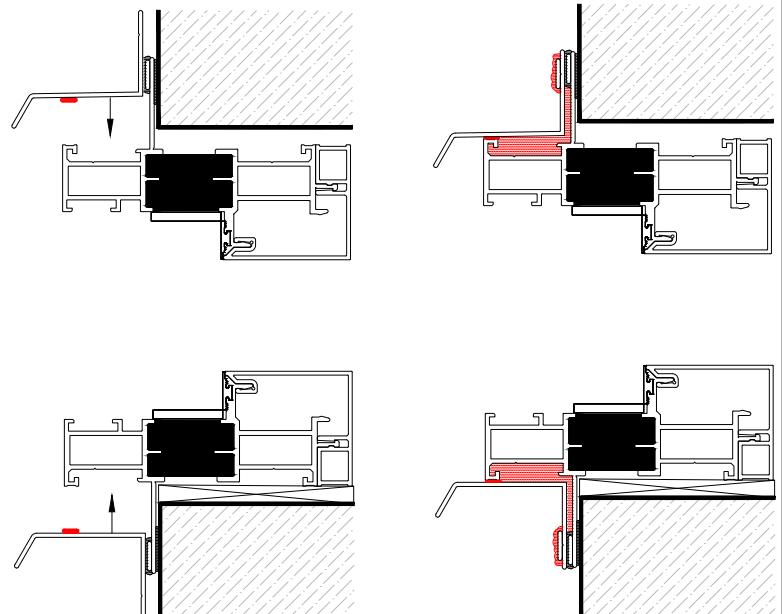


WB6

Apply flashing tape at the sides of the window frame as shown. Extend tape a minimum of 1" past the Nail Fin, but not more than the width of the flashing tape. Smooth the tape using a J-Roller.

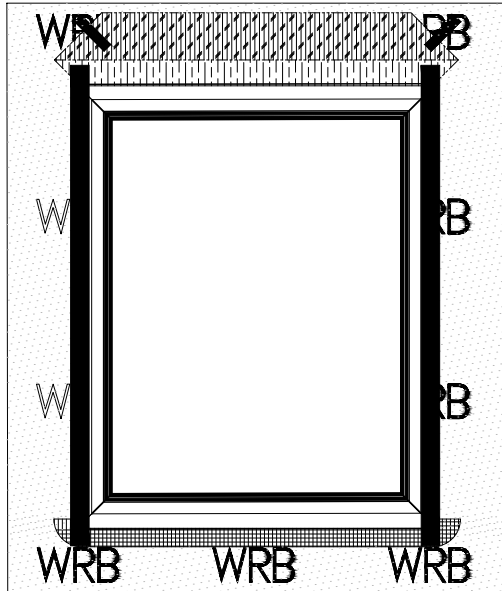




WB7

Apply flashing tape at the top of the window frame as shown, overlapping the side flashing tape. Smooth the tape using a J-Roller. **Side flashing tape cannot extend above the top flashing tape. Doing so could result in product or property damage.**

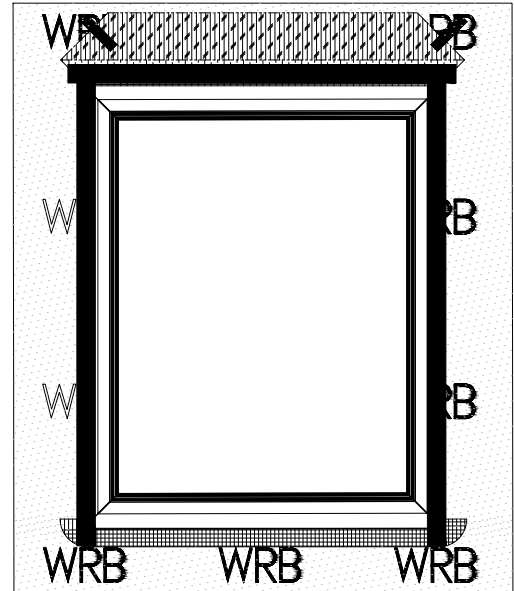

WB8

Unfold the top flap of the wrap, and tape the angled seams as shown. Smooth the tape using a J-Roller. At the interior head and jambs, insert insulation between the frame and the building conditions (no insulation at the sill).

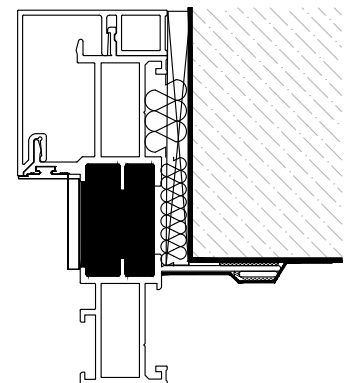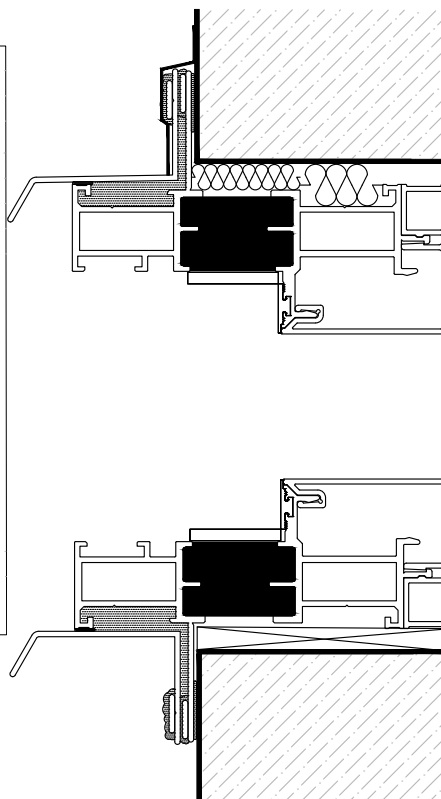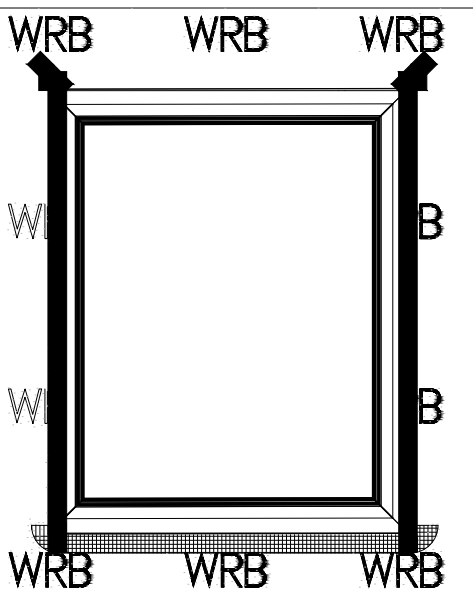

WB9


Refer to the Shop Drawings if additional flashing or other material is required. After exterior building construction is completed, install backer rod, then apply a continuous bead of sealant around entire perimeter of window frame and tool in place.

Note:

Installer to verify that Sealant being used is compatible with Quaker window frame and the surrounding building construction materials.

Note:




Please inform the exterior facade installer that they must maintain a minimum 1/4" gap between the facade material and the Window Unit, and that the facade material should never come in contact with the Window Unit.

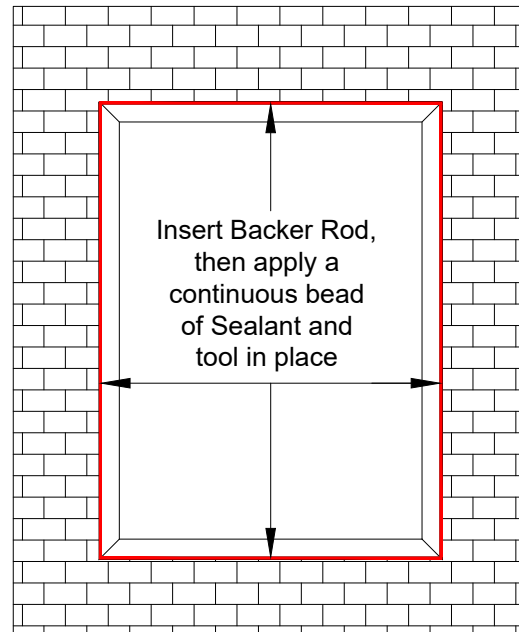

WB10

This step must be done for this application.

At the interior head and jambs, insert insulation between the frame and the building conditions (no insulation at the sill). Then install a backer rod, then apply a continuous bead of sealant around the entire interior perimeter of the frame. Tool sealant in place as needed.

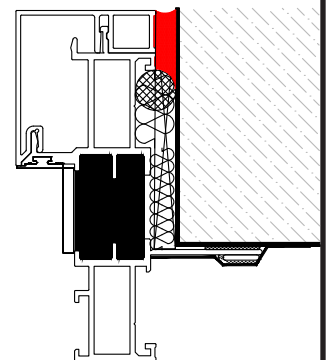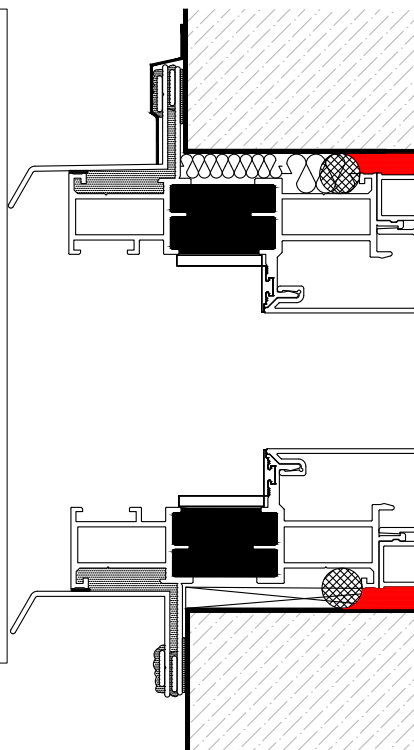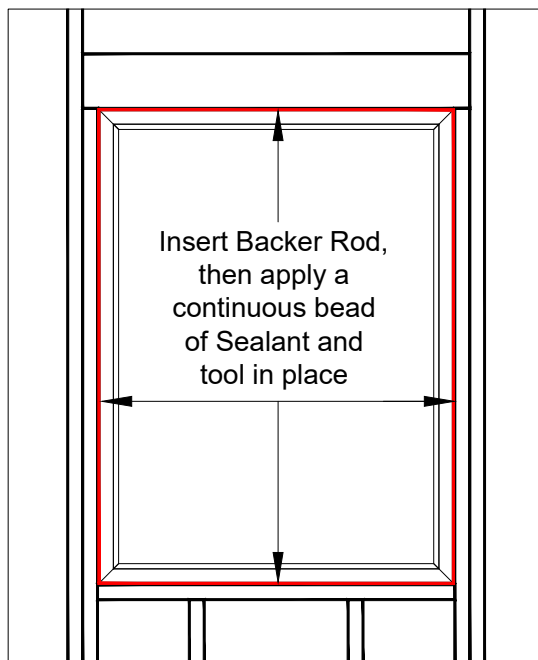


Note:

Installer to verify that sealant being used is compatible with Quaker window frame and the surrounding building construction materials.

Glass Installation and Final Assembly (Pages 12-13)


GI1

Apply a continuous 1/4" bead of sealant along the glazing legs filling the T-track. Then apply a bead of sealant along the inside corners of the frame from the glazing leg out to seal the seam. Tool the sealant in the corners.

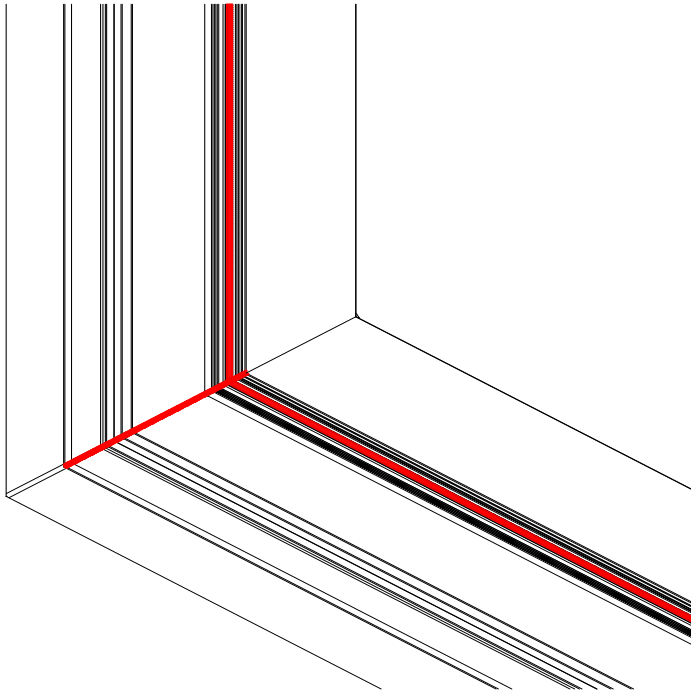


GI2

Insert provided setting blocks on the sill. Place 1 block in each corner no more than 6" from the jamb. Continue to place blocks along the sill spacing them no more than 18" apart.

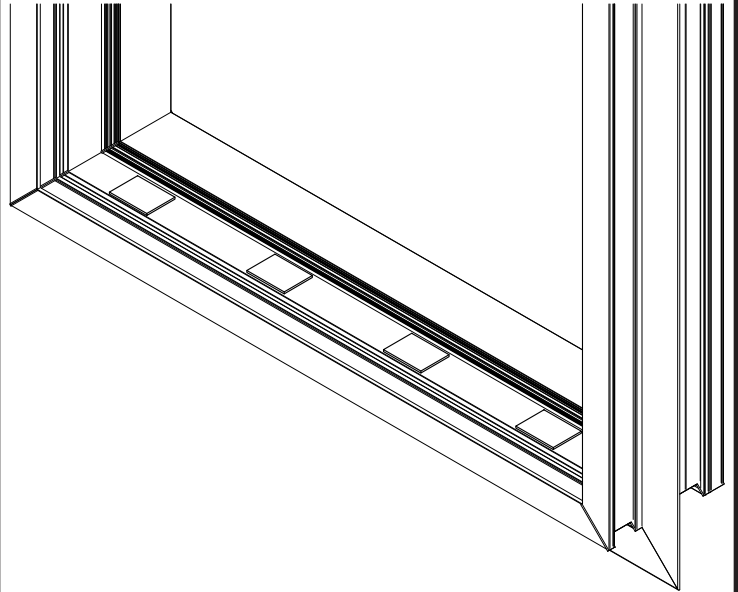


GI3

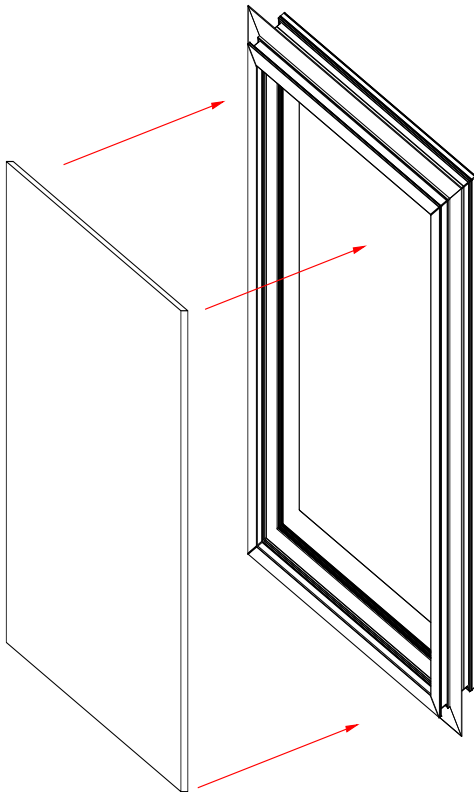

Install the insulating glass unit into the window frame from the exterior, bottom first and tilting the glass into the frame.



GI4

With the glass in the frame, install the remaining setting blocks around the glass perimeter. Place a block no more than 6 inches from each corner, and along the perimeter of the glass every 18 inches.

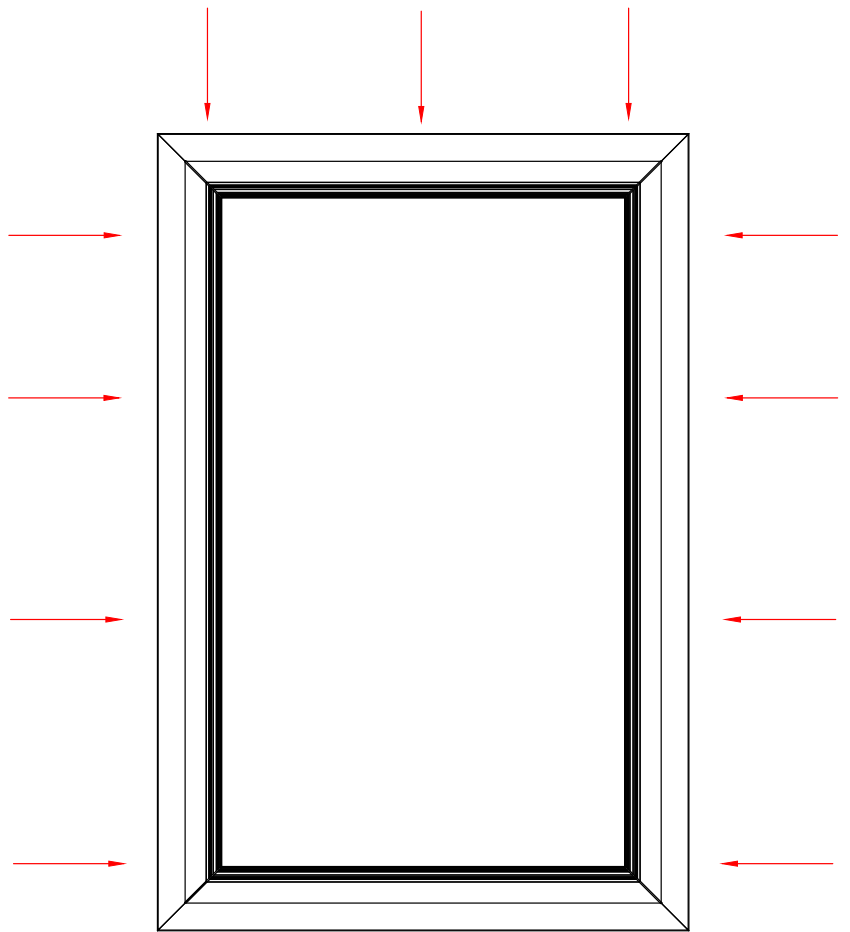

GI5

Install the horizontal glazing stops first at the head and sill, then install the vertical stops at the jambs to lock the glass into the frame. Install the stop by rolling the stop into place. A mallet may be required to persuade the stops to lock into place.

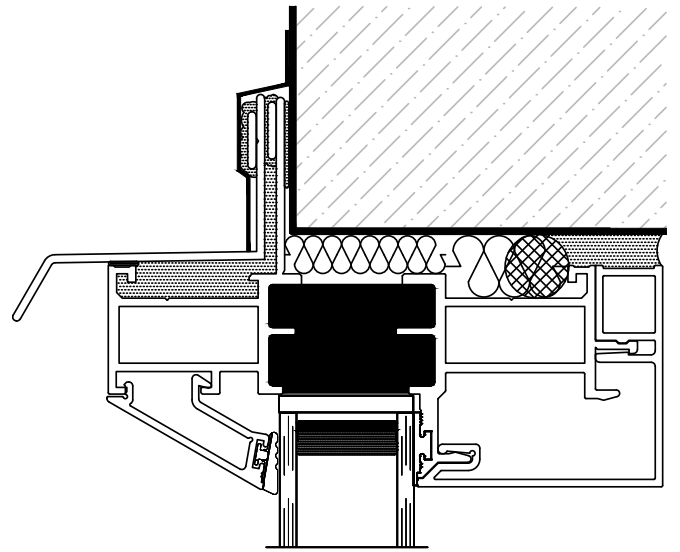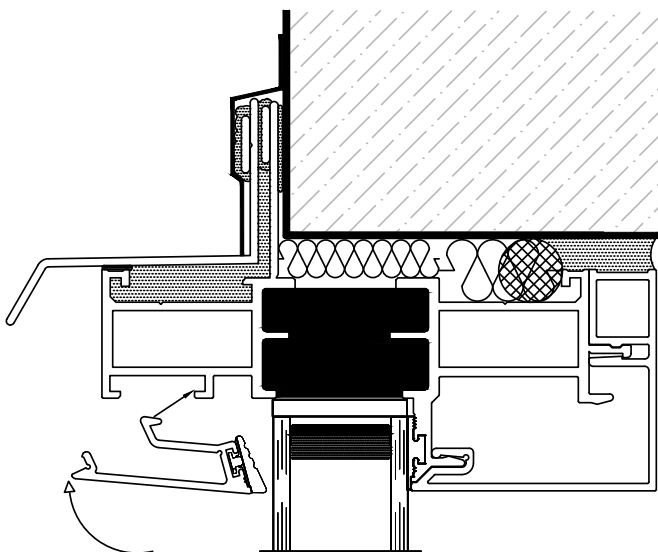

This Completes the Installation when a Weather Resistant Barrier is being used