

CityLine/CityVu EdgeLine/EdgeVu M-Series M600 InSwing Through Jamb (Position Fin) Installation Guide

IG-013 REV. 08/23 1.2



CityLine EdgeLine

Scan Here for a Digital Version of the
Installation Guides in English.

Quartz Luxury Windows & Doors:
www.quartzluxurywindows.com



CityVu EdgeVu

Scan Here for a Digital Version of the
Installation Guides in English.

Quartz Residential Windows & Doors:
www.quakerresidentialwindows.com



M600

Scan Here for a Digital Version of the
Installation Guides in English.

Quaker Commercial Windows & Doors:
www.quakercommercialwindows.com



Para ver las instrucciones en Español, escanea aqui.

If this set of instructions does not match your installation method or the wall conditions of the job site, please check our website listed below for other options, or call Quaker Customer Service for additional information.






















Quaker Window Products
504 U.S. Hwy 63 South
Freeburg, MO 65035
(800) 347-0438
www.quakerwindows.com



PO Box 128 | 504 Highway 63 South | Freeburg, MO 65035 | 800-347-0438 | 573-469-4151 (fax)

CityLine/CityVu EdgeLine/EdgeVu M-Series M600 InSwing Through Jamb (Position Fin)

Read these instructions completely before starting any installation. Failure to install and maintain our product according to these instructions may void any product warranty. Please visit our website at www.quakerwindows.com or call 1-800-347-0438 for additional information.

Tools required by installer:		Materials required by installer:	
Safety Glasses		Utility Knife	
Drill/Driver		Caulk Gun	
Level		Tape Measure	
Hammer		J-Roller	
Putty Knife		Staple Gun	
		Foam Backer Rod	
		Shims (Waterproof)	
		Flashing tape (Self-Adhering)	
		Fasteners	
		Minimally Expanding Foam	
		Sealant	
		Water Resistant Barrier/House Wrap (WRB)	
		IPA Alcohol	
		Drip Cap	

⚠ WARNING

Tools

- Follow manufacturer’s instructions for safe operation of tools, and ladders/scaffolding. Always wear safety glasses. Failure to do so could result in injury, product or property damage.

Handling

- Do not store units outside, or in a hot environment. Doing so could result in product damage.
- Do not carry flat.** Doing so could result in product damage, injury, or property damage.
- Stack units as straight as possible to avoid bowing. **Do not lay flat!**

Glass

- If broken, glass can fragment causing injury. All Quaker products are available with safety glass. In many areas, local building codes require safety glass in certain locations and/or applications. Unless safety glass is ordered, Quaker windows are not provided with safety glass. Before ordering, consult your local building codes for more definitive information.

Fastening

- Metal fasteners and components could corrode when used with preservative-treated lumber. Use approved fasteners and components to fasten window or door. Failure to do so could cause a failure resulting in injury, product or property damage.
- Fastener must attach to a structural framing member with 1 1/2” minimum fastener embedment, or minimum 3 full threads with a minimum 5/16” head as products were tested with.
- Quaker does not supply anchorage/fastener calculations, and is not responsible for determining structural adequacy of the anchorage and fasteners used to install our products, or the openings into which they are installed.**
- Do not over drive screws or nails.** Doing so could result in product damage.

CAUTION**Installation**

- Always support window or door in opening until fully fastened. Failure to do so could result in the window or door falling out or causing injury, product, or property damage.
- Nailing flanges and drip caps (integral or applied) **do not** take the place of window flashing. All windows and doors must be properly flashed and sealed with material compatible sealant for protection against water and air infiltration around the entire perimeter. Failure to do so could result in product or property damage.
- **Do not** set window directly on sill plate. Place shims under the side jambs. Window or door must be properly shimmed. Failure to do so could affect operation and product performance and could result in product damage.
- Live or dead loads transferred into our product can affect functionality, damage frame joinery or cause glass failures. Dead loads such as upper levels, roof, etc. Should be constructed before window or door is installed.
- Loads shall be designed to withstand the most critical effects of load factors and load combinations as required by the building code. (Loads are including but not limited to Live, Dead, Collateral, Auxiliary, Thermally induced, Seismic, etc.)
- Maximum vertical deflection of the header under all Load combination should not exceed the Span/720 or 1/4" whichever is less.
- Windows and doors have small parts. Small parts if swallowed could pose a choking hazard to young children. Dispose of unused, loose, or easily removed small parts. Failure to do so could result in injury.
- **Do not** drill through or into window sill to install alarm wires.

Sealing

- Follow instructions of foam, sealant, and flashing manufacturers regarding safety, material application, compatibility, and periodic maintenance for continued weather resistance of their products. Failure to do so could result in product or property damage. **DO NOT** overfill between the frame and opening.
- Minimally expanding foam insulation must be compliant with AAMA 812-19.
- Quaker recommends 100% silicone (ASTM C920 compliant) neutral cure only sealant. Always clean all areas where sealant will be applied. Failure to do so could result in product or property damage.
- Flashing tape must meet ASTM-D779 performance requirements.
- Maintain a minimum of 1/4" between the window or door frame and exterior finish materials. Failure to do so could result in product or property damage.

Joining

- Do not join any window or door to any window or door not designed for joining. Joined windows and doors must be individually supported in the opening. Failure to do so could affect operation and product performance and could result in product or property damage.


Cleaning

- Acid solutions used for cleaning will damage glass, fasteners, hardware, and metal flashing. Protect these products and follow cleaning products manufacturers instructions. If acid contacts the window or door, wash all surfaces immediately with clean water.
- **Do not** use razor blades to clean glass surface. Glass damage could result.
- Clean glass using liquid glass cleaner.
- Clean frame, sash, panels, and insect screens using mild detergent and warm water with a soft cloth or brush.

IMPORTANT


- Buildings constructed prior to 1978 could contain lead paint which could be disturbed during window or door replacement. For more information on proper management of lead paint, go to: www.epa.gov/lead
- Care must be taken to properly recycle or dispose of old materials. Any recyclable materials should be separated from non-recyclable or hazardous materials. Please consult with local or state authorities regarding proper disposal of non-recyclable or hazardous materials.
- These are generic instructions intended to cover most common situations, which may not be appropriate for all installations due to building design, construction materials, or methods used and/or building or site conditions. Consult a contractor or architect for recommendations.
- Inspect all units for any damage or defects prior to installation. Contact the nearest Quaker distributor if there are any problems.

1

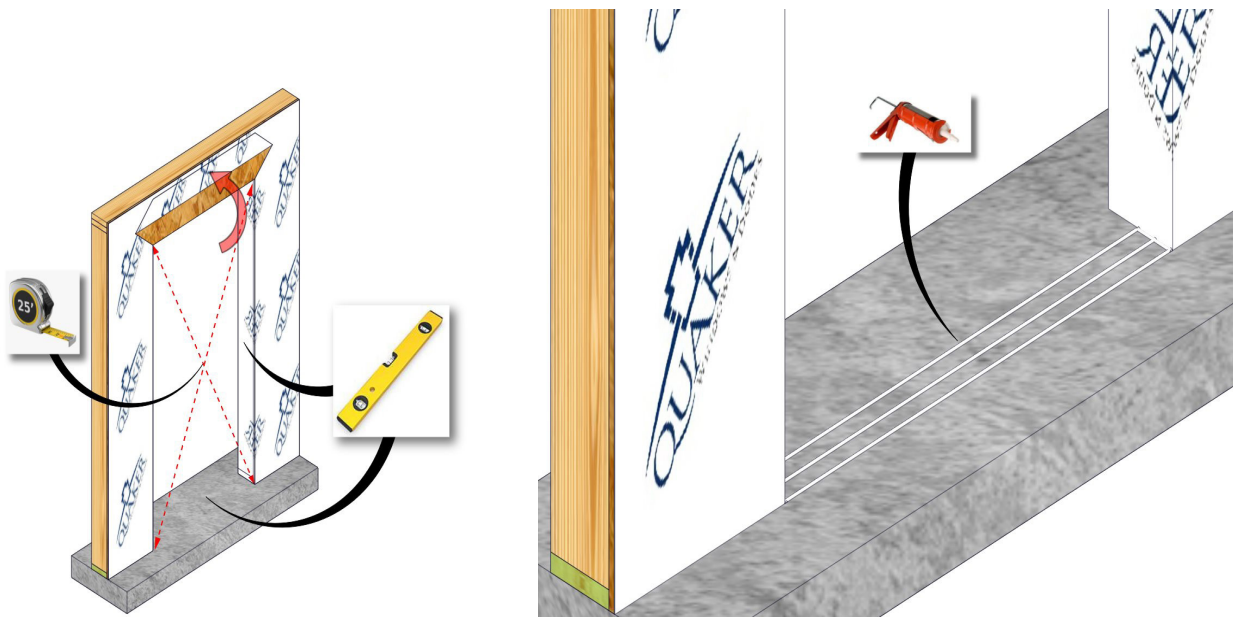


Measure and verify the size of the rough opening. See shop drawings for the proper opening sizes. Verify the rough opening is flat, plumb, level, and square. **The sill beneath the unit must be level for proper unit operation.** Check the fit of the sill pan system making sure the conditions are level, the installer can pre-apply the shims to the sill condition prior to installation of the sub-sill. Apply three 3/8" continuous beads of silicone across the entire width of the rough opening sill, and a 3/8" continuous bead of silicone 1/2" from each side of the rough opening. The bead will run the entire depth of the sub-sill anchor plate starting at the face of the wall.

2

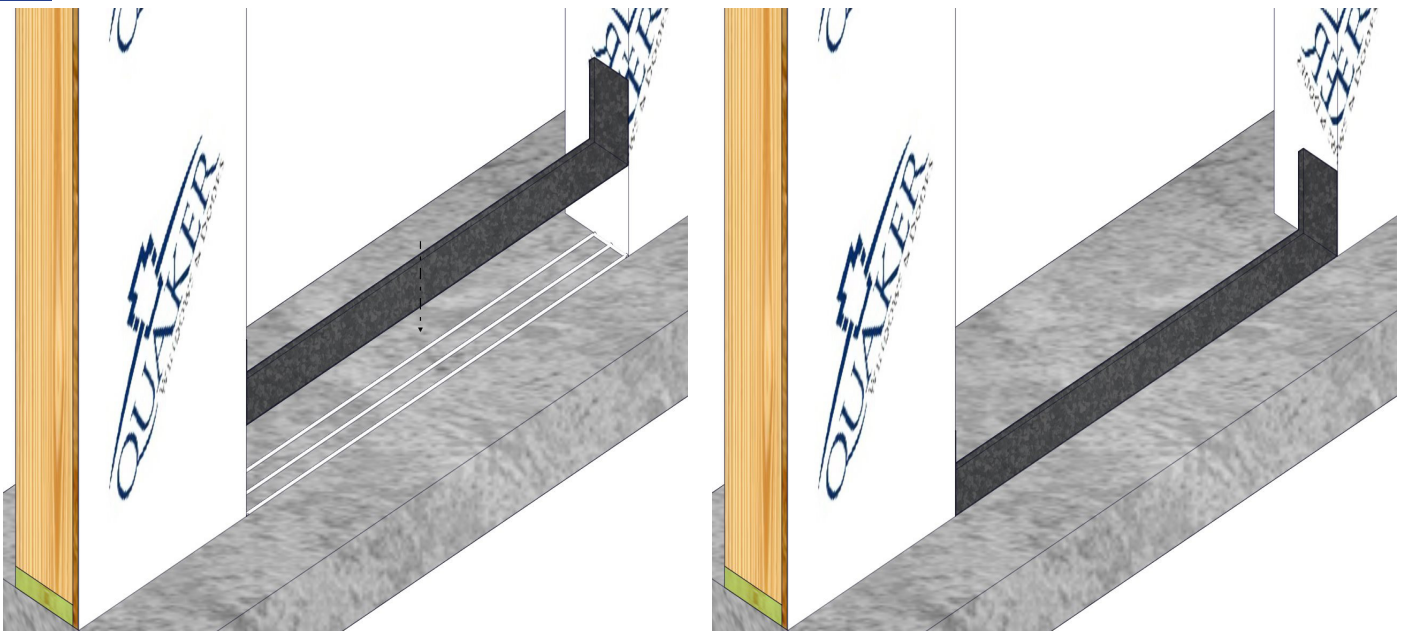


Install a sill pan flashing with minimum 1/2" interior leg (**by others**). If installing the door with the position fin set the sill pan 3 3/16" in from the exterior.

3

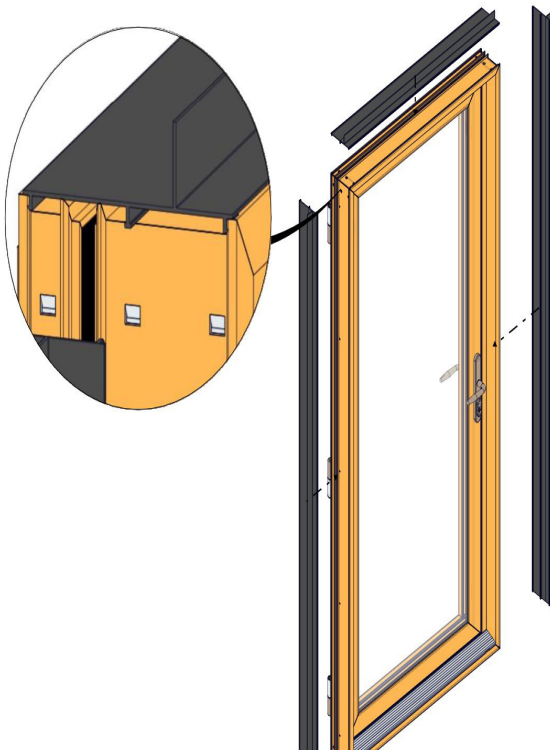


Install the position fin onto the frame if not installed at the factory on the head and both side jambs.

4

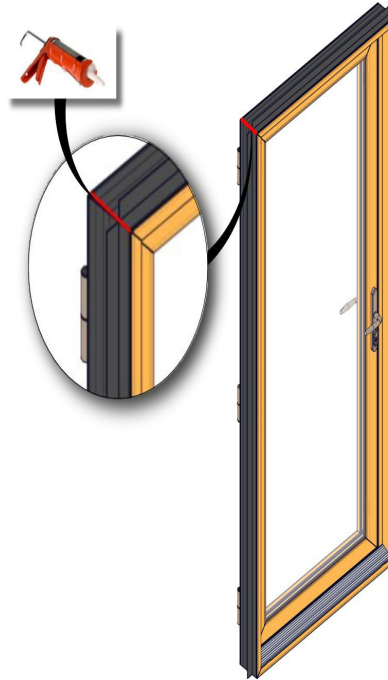


Snap the fin into place with short side of the flange facing the exterior. Seal the corners of the position fin.

5

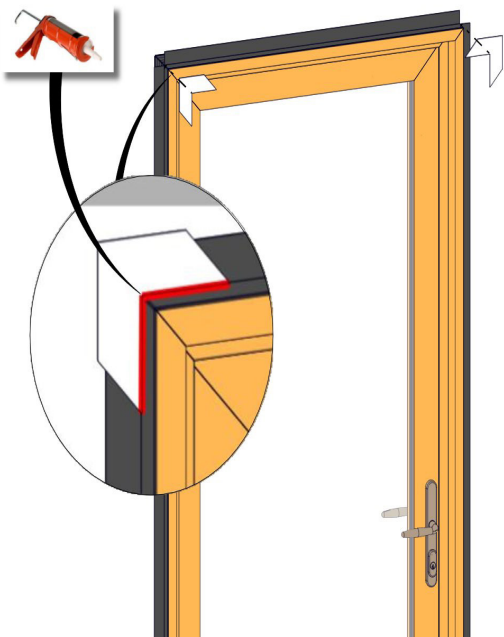

Install the two top foam corner key gaskets over the exterior side of the position fin corner gaps. Seal the exterior corners where the foam gasket meets the position fin.

6

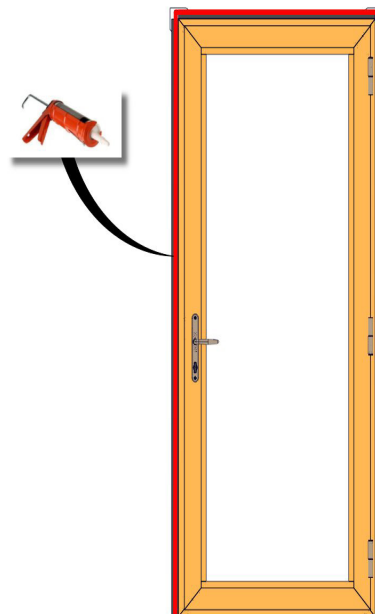


Install a continuous bead of sealant around the interior side of the position fin.

7




Center and set the door frame into the rough openings pushing the position fin tight against exterior framing. **Note: DO NOT nail or fasten through the position fin.** Level at the sill and plumb the frame. Shim under the frame to bring to level in necessary.

8

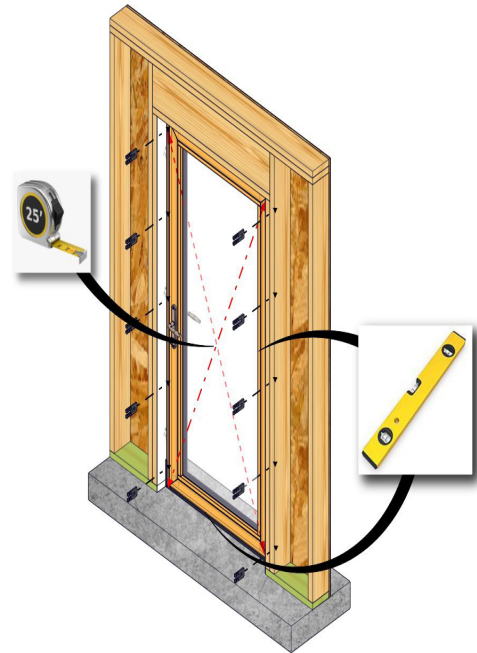


From the interior, square the frame in the opening by installing shims between the jambs and framing.

9

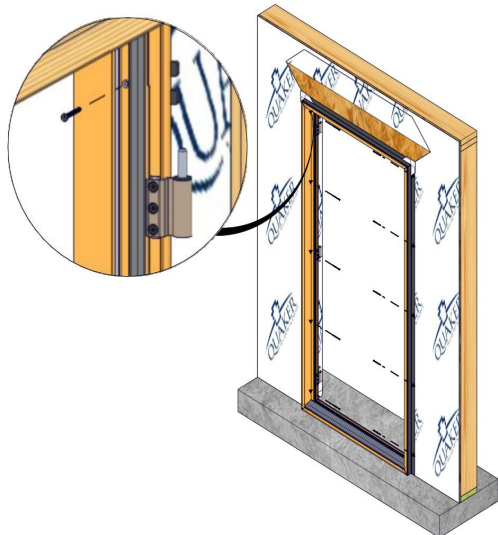


Drill a countersink hole through the jambs in the exterior track per anchorage calculations. **Quaker Window Products does not supply or claim liability for anchorage/fastener calculations. It is the installer/client's responsibility for structural adequacy of the anchorage and fasteners.** Typically, a #12 screw 6" from the top and bottom and 16" on center thereafter.

10

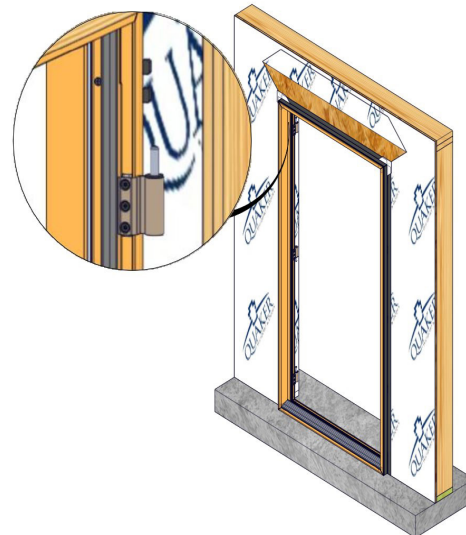


Install and fasten the door unit in place using fasteners by others per anchorage calculations. Typically, a #12 screw 6" from the top and bottom and 16" on center thereafter. Always follow the anchorage calculations and fastener/anchor manufacture's guidelines for proper edge distance, load capacity and installation techniques.

11

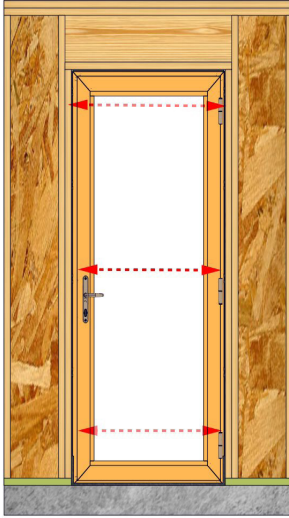


Verify the door is square, level, and plumb. Check the spacing around the door at the top, middle, and bottom to make sure the door is not over shimmed. See hinge and lock adjustment guides if adjustments are needed.

12

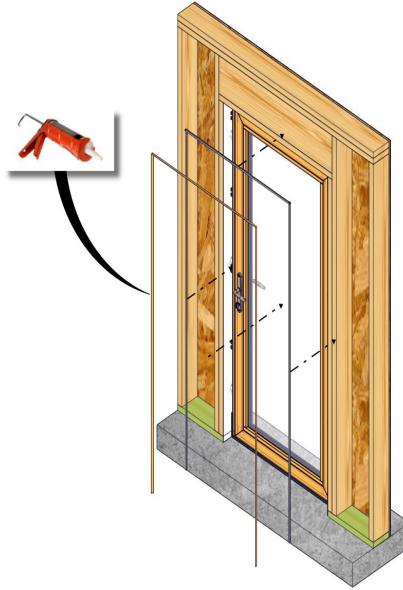


Apply insulation and a continuous bead of sealant around the entire interior perimeter of the door unit.

13

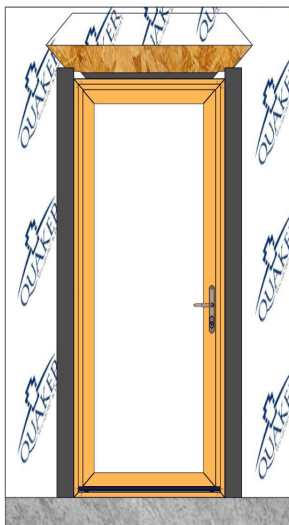


Cut two pieces of flashing tape for jamb flashing extending 1" above head position fin. Remove release paper and press tightly along sides of door frame.

14

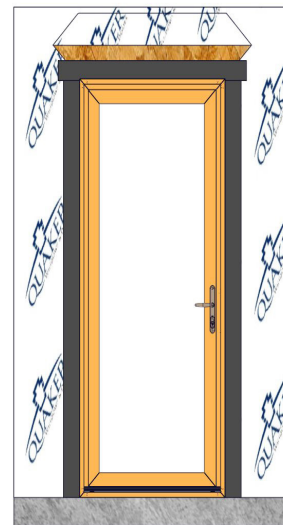


Cut a piece of flashing tape for the head flashing, which extends beyond outer edges of jamb flashings. Remove release paper and install completely covering position fin and adhering to exposed sheathing or framing members.

15

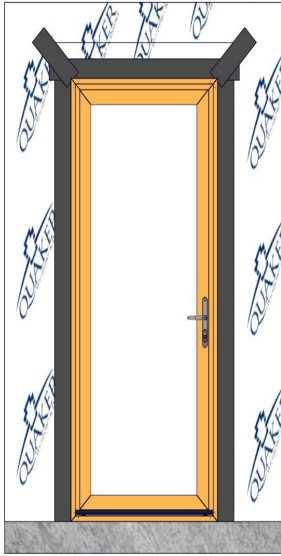

Flip down upper flap of WRB so it lays flat across head flashing, then trim 1" - 2" above the door opening. Tape along all cuts in WRB and across head of the door with flashing tape.

16

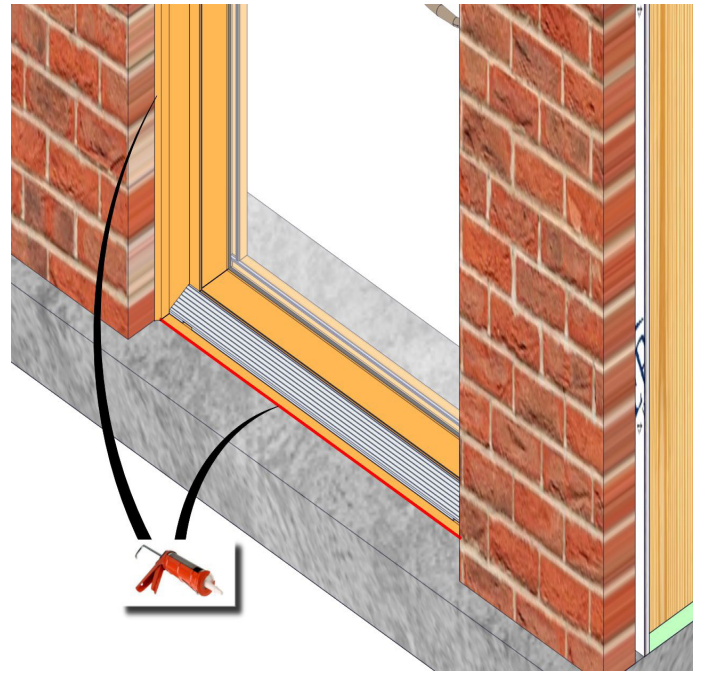

Apply a continuous bead of sealant across the full length of the sill and around exterior perimeter of door unit.